


Telos Console Director™
 (Telos Electronics Packages 0326-0000 & 0327-0000)
 Operator's Guide

Telos Electronics Packages 0326-0000 and 0327-0000 are distributed as part of complete assemblies available from major console manufacturers.

- For use with Telos One-X-Six, Direct Interface Module, and IA2 Interface only.

- Console Directors are connected to the Telos interface in the same manner as the Telos Switch Console (use the RJ-11 style connector on rear). See Telos User's Manual for details.

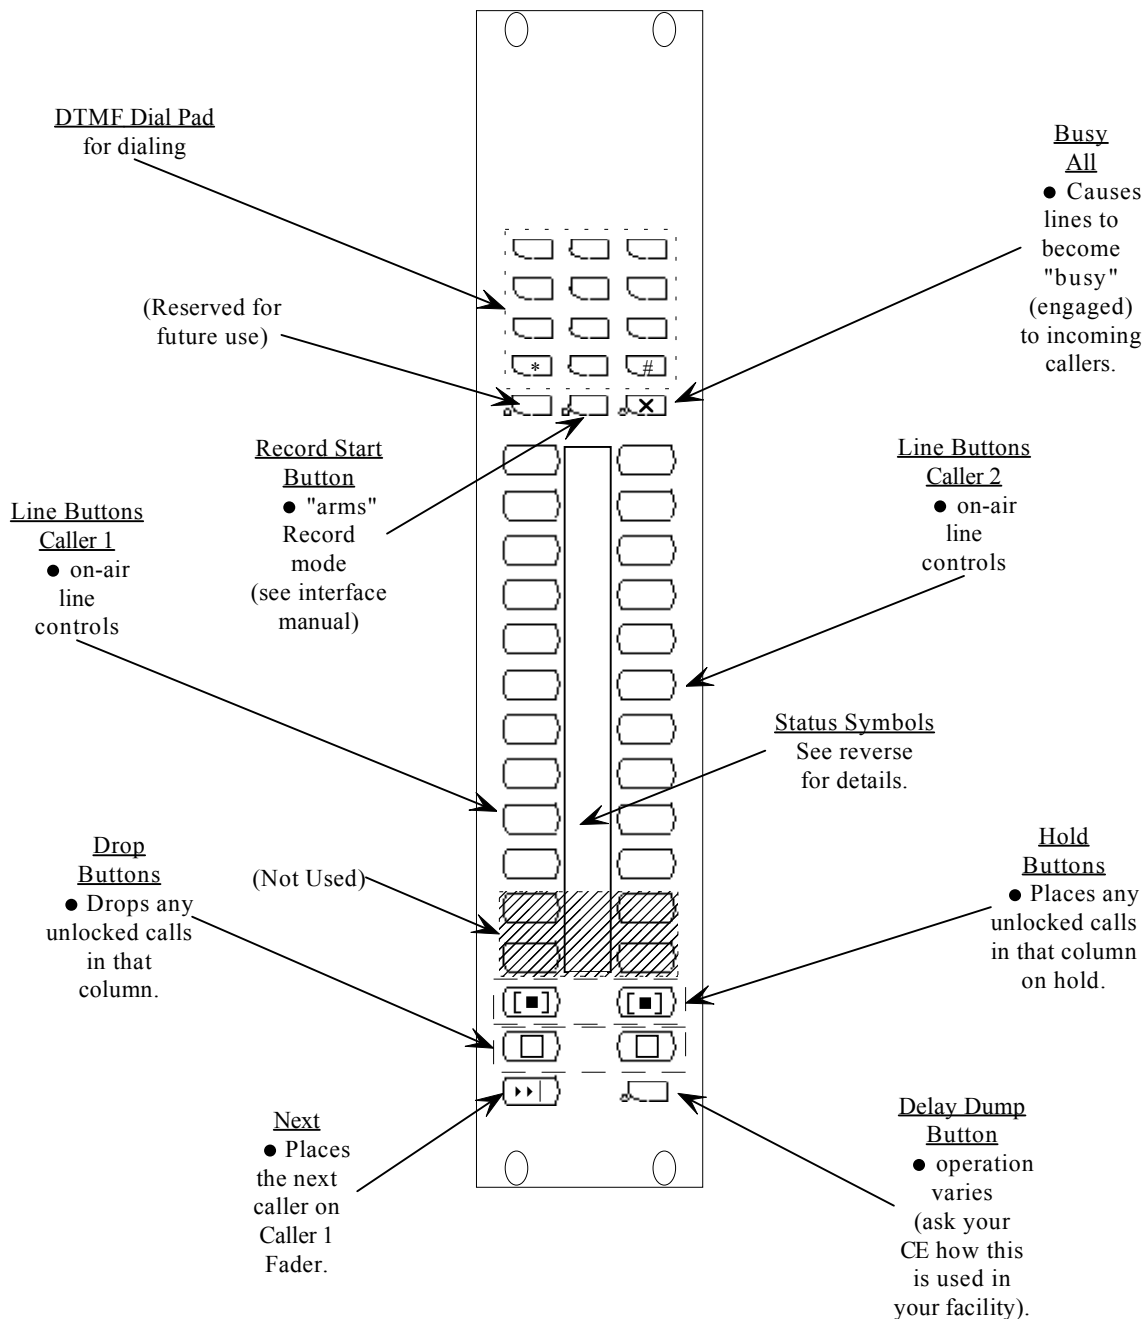

Telos Console Director Status Symbols™



This line is currently idle.



This line is in use elsewhere.



This line is ringing.



This line is on hold.



This line is on-air on the Caller 1 fader (i.e. "Main").



This line is on-air on the Caller 2 fader (i.e. "Conference").



This line is on-air & locked - Caller 1 fader
Pressing the left line button will unlock this line.



This line is on-air & locked - Caller 2 fader
Pressing the right line button will unlock this line.



This line has been "busied" by the busy-all function
Press "X" button to cancel busy-all.



Button not used.